RadioShack®

Cat. No. 60-3058

Two-Way Walkie-Talkies

Get ready for lots of fun with your RadioShack Two-Way Walkie-Talkies! You can press the **CALL** button to page the other walkie-talkie, which then rings. The walkie-talkies require no special license to operate. You can use them around the house, on camp outs and hikes, or anywhere you want to talk to someone who is up to 120 feet (36 m) away (depending on weather conditions and battery strength). You and a friend can use the walkie-talkies to talk and listen at the same time. The Two-Way Walkie-Talkies are recommended for ages 4 and up.

INSTALLING BATTERIES

You need four AAA batteries (two for each unit) to power the walkie-talkies. For the best performance and longest life, we recommend RadioShack alkaline batteries (not supplied).

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

1. Use a screwdriver to loosen the screw on each walkie-talkie's battery compartment cover, then remove the covers.

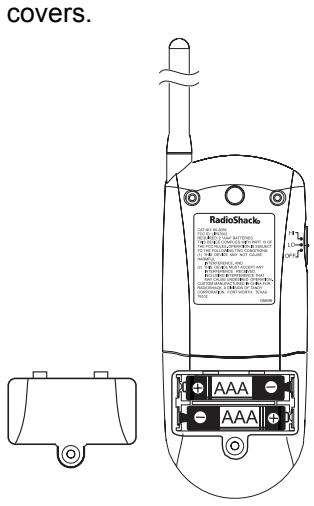

2. Place the batteries in each compartment, as indicated by the polarity symbols (+ and –) marked inside each compartment.
3. Replace the covers and secure them with the screws.

If either of the walkie-talkies does not transmit properly or the sound weakens, replace its batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use your walkie-talkies for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

OPERATION

1. Slide **HI/LO/OFF** on each walkie-talkie to **LO** to turn them on. To turn up the volume, set **HI/LO/OFF** on each walkie-talkie to **HI**.

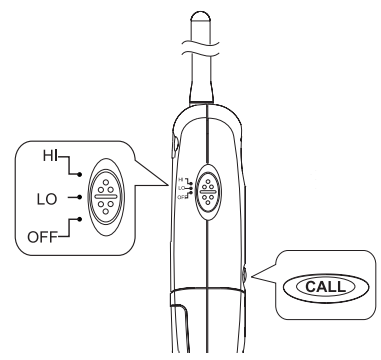

2. Press and release **CALL** on one of the walkie-talkies. Both walkie-talkies ring. When the person using the other walkie-talkie answers, speak into **MIC** in a normal voice.

   Note: For the best results, use the walkie-talkies with the flexible antennas pointing upward.

3. After you finish using the walkie-talkies, slide **HI/LO/OFF** on both walkie-talkies to **OFF** to turn them off.

CARE

To enjoy your RadioShack Two-Way Walkie-Talkies for a long time:

- Keep the walkie-talkies dry. If they get wet, wipe them dry immediately.
- Handle the walkie-talkies gently and carefully. Do not drop them.
- Use and store the walkie-talkies only in normal temperature environments.
- Keep the walkie-talkies away from dust and dirt.
- Wipe the walkie-talkies with a damp cloth occasionally to keep them looking new.

Modifying or tampering with the walkie-talkies' internal components can cause a malfunction and might invalidate the warranty and void your FCC authorization to use them. If your walkie-talkies are not performing as they should, take them to your local RadioShack store for assistance.

© 1999 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation.

Notes:

- Your Two-Way Walkie-Talkies operate on two frequencies. One walkie-talkie transmits at 49.86 MHz frequency and receives at 40.68 MHz frequency. The other walkie-talkie transmits at 40.68 MHz frequency and receives at 49.86 MHz. This is why the two walkie-talkies have different colored stickers on the back. Walkie-talkies with the same color sticker cannot transmit and receive (to and from each other) at the same time.
- You cannot operate your walkie-talkies near devices with transmitters that use the same frequencies as your walkie-talkies.

THE FCC WANTS YOU TO KNOW

Your walkie-talkies might cause TV or radio interference even when they are working properly. To determine if your walkie-talkies are causing the interference, turn them off. If the interference goes away, the walkie-talkies are causing it.

Try to eliminate the interference by:

- moving the walkie-talkies away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your walkie-talkies.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *04/99*

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

06A99

Printed in China